


Exploded drawing of Electric Impact Wrench RD-EIW05

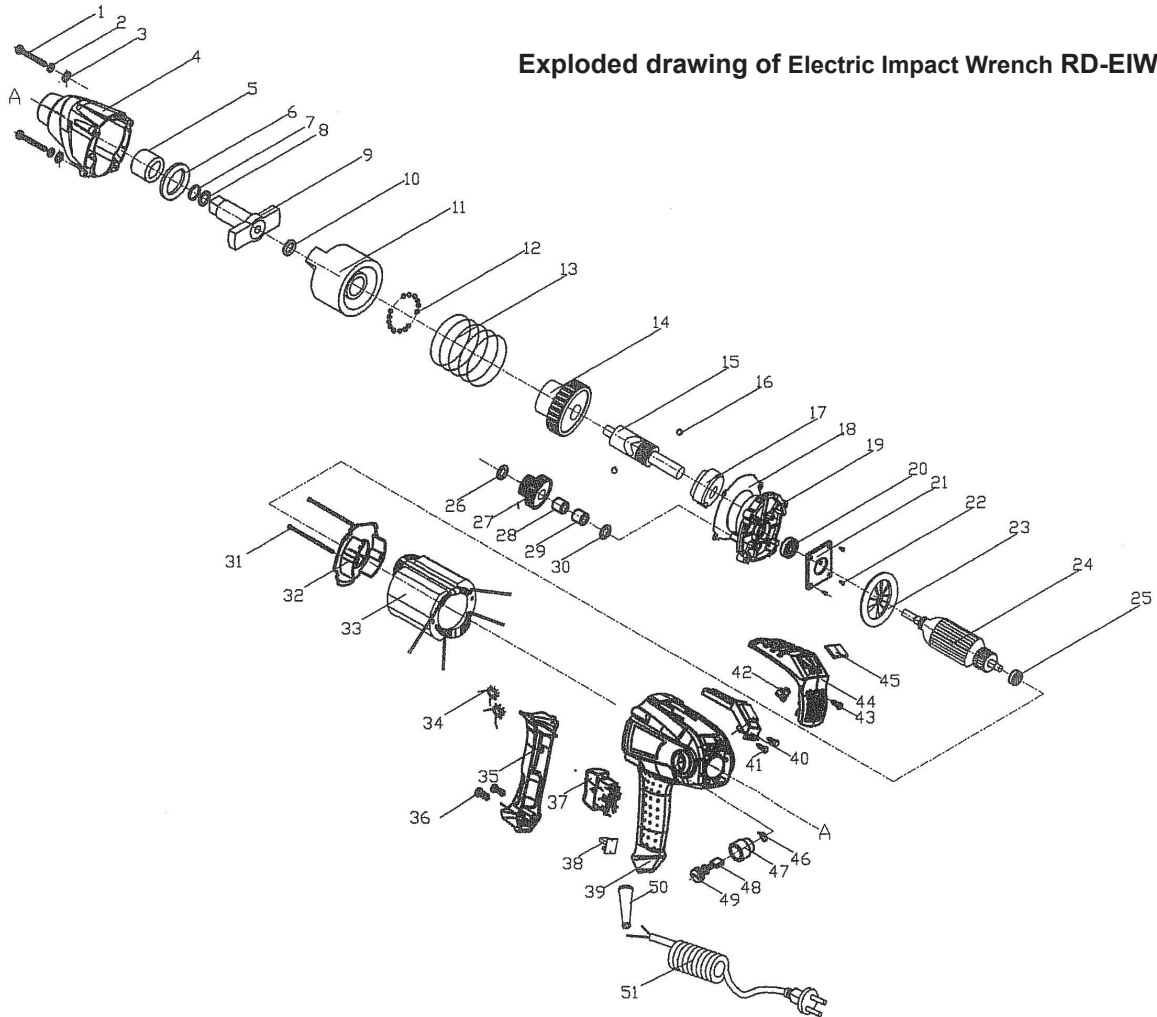

Spare Parts List of Electric Impact Wrench RD-EIW05

No.	Description
1	Screw
2	Spring Washer
3	Washer
4	Speed-down Box
5	Slippery Bearing
6	Front Washer
7	Lock Circle
8	"O" Circle
9	Spindle
10	Rear Washer
11	Impact Block
12	Steel Ball
13	Impact Spring
14	Big Gear
15	Clutch Shaft
16	Steel Ball
17	Steel Sleeve
18	Paper Washer
19	Middle Cover
20	201 Bearing
21	Bearing Platen
22	Screw
23	Fan
24	Rotor
25	608 Bearing
26	Washer
27	Gimmel Gear
28	Slippery needle Bearing

No.	Description
29	Slippery needle Bearing
30	Washer
31	Screw
32	Wind-proof Board
33	Stator
34	Inductor
35	Handle Cover
36	Screw
37	Switch
38	Wire Base
39	Housing
40	Torque Controller
41	Screw
42	Adjusting Button
43	Screw
44	Housing Top Cover
45	Transparency Cover
46	Spring
47	Carbon Brush Holder
48	Carbon Brush
49	Carbon Brush Cover
50	Cable Sleeve
51	Cable